



Configuration de la fonction Auto LF (Line Feed)

Une fois l'imprimante branchée, ouvrez l'utilitaire Printer test disponible sur notre site

- 1. Sélectionner le port
- 2. Le type d'imprimante
- 3. Renseigner le type de code, ici "Hex"

4. Entrez l'Hexadécimal suivant : 1F 1B 1F 00 00 01 88 01, pour activer la fonction Auto Line Feed

5. Cliquez sur Print pour valider l'Hexadécimal. L'imprimante bipera 2 fois pour confirmer votre envoi de code.

6. Pour désactiver la fonction Auto Line Feed, répéter les étapes 1 à 3

7. Entrez l'Hexadécimal suivant : 1F 1B 1F 00 00 01 88 00

8. Cliquez sur Print pour valider l'Hexadécimal. L'imprimante bipera 2 fois pour confirmer votre envoi de code.



|--|

Signation and the state of the			<u> </u>
Port Select © LPT © COM © USB © NET	Printer Type	POS-76	
LPT Set COM Set 1 LPT1 COM1 9600	- RTS	2	
NET Set Local IP: 192 . 168 . 11 . 174	Refresh		
Printer IP: 192 . 168 . 123 . 100	Connect	Ping	
New IP: 192 . 168 . 1 . 100	Set New IP	NetMonitor	
New ID: 0 . 0 . 0 . 0	New ID	(Set last four ID)	
Content: Rep: 1 VHEX Clear	AutoSend Cyc	500 ms 🗖 CutPaper	5
1F 1B 1F E0 13 14 m n t mode 4		Print	
Remark:			
m=0 Close		Cut Paper	
m=0 Close m=1 open n: 1<=n<=20, times for alarm t: 1<=t<=20, Blink interval time t*50 ms		Cut Paper	wer
m=0 Close m=1 open n: 1<=n<=20, times for alarm t: 1<=t<=20, Blink interval time t*50 ms mode=0 Close		Cut Paper © Open cash drav Traditional	wer
m=0 Close m=1 open n: 1<=n<=20, times for alarm t: 1<=t<=20, Blink interval time t*50 ms mode=0 Close model=01 alarm no blink model=02 blink no alarm model=03 blink with alarm		Cut Paper © Den cash drav Traditional Driver Print	wer
m=0 Close m=1 open n: 1<=n<=20, times for alarm t: 1<=t<=20, Blink interval time t*50 ms mode=0 Close model=01 alarm no blink model=02 blink no alarm model=03 blink with alarm		Cut Paper Open cash drav Traditional Driver Print	wer

Modifié le 05/10/2022, v2

Z.A.C. De la Princetière – 12, Avenue des Forgerons – 44730 Saint Michel-Chef-Chef - Tél. +33 (0)2 28 53 01 01 – Fax. +33 (0)2 28 53 01 00 Mail. contact@perimatic.eu Site : www.perimatic.eu

S.A.PERIMATIC Société Européenne au capital de 350 100 € - RCS Saint-Nazaire B 421581 091 - NACE 4666 Z - SIRET 421 581 09100046 - Code TVA FR 55 421 581 091